



203-0004-01

4 Pack of SchmartPatch for 1210, 1608, 2010, 2512 and CASE-B/C/D/E

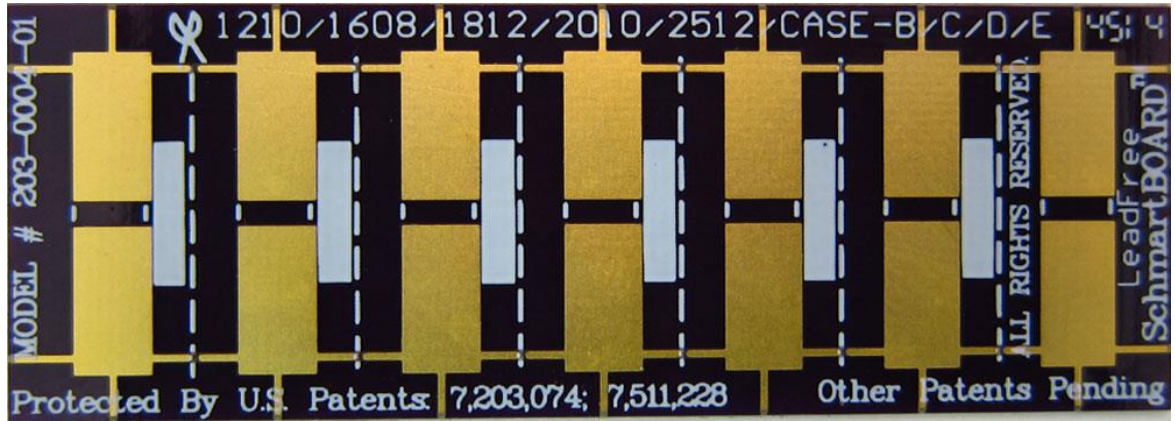

Model# 203-0004-01

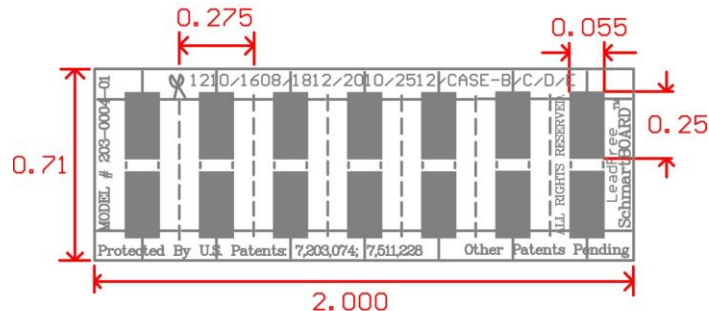

203-0004-01 4 Pack of SchmartPatch for 1210, 1608, 2010, 2512 and CASE-B/C/D/E

SchmartPatch allows you to add components to or replace components on any substrate such as a PCB(Printed Circuit Board). This SchmartPatch board allows you to cut off a pad, stick it on to the surface (with the adhesive already on the back of the SchmartPatch) and then solder a component onto the SchmartPatch. There are also pads to solder jumper wires to make the electrical connection. This board has 7 pads that can be cut off as needed. Each of these pads support all components in any of the following package footprints: 1210, 1608, 2010, 2512, CASE-B/C/D/E. 4 SchmartPatches are included.

SchmartPatch Surface Mount Family



Schmartboard, Inc.
37423 Fremont Blvd.
Fremont, CA 94536

510-744-9900(P)
510-744-9909(F)
<http://www.schmartboard.com>
<http://www.facebook.com/Schmartboard>
<http://www.twitter.com/Schmartboard>